Canon

DIGITAL IXUS 980 IS

Getting Started Guide

ENGLISH

CEL-SJ5SA210

Checking the Package Contents

Check if the following items are included in your camera package. If anything is missing, contact the retailer where you purchased the camera.

Camera

Battery Pack NB-5L
(with Terminal Cover)

Battery Charger
CB-2LX/CB-2LXE



Interface Cable
IFC-400PCU

AV Cable
AVC-DC400

Wrist Strap
WS-DC7

Memory Card
(32 MB)

Canon Digital Camera
Solution Disk

Warranty System
Booklet

Getting Started Guide
(This Guide)

Canon Digital Camera Manuals Disk

- You can use the included memory card to try out your new camera and take some test shots.
- Adobe Reader is required to view the PDF manuals. Microsoft Word Viewer 2003 can be installed to view Word manuals (Middle East only). If this software is not installed on your computer, access the following web site to download the software:

  http://www.adobe.com (in the case of PDF)
  http://www.microsoft.com/downloads/ (in the case of Word format)

Let's Get Started

This camera's guides are divided into the following two parts.

Getting Started

This explains how to prepare the camera for use and the basics of shooting, viewing and printing images. Start out by familiarizing yourself with the camera and mastering the basics.

Learning More (Camera User Guide)

Once you have mastered the basics, use the camera's many features to shoot more challenging photos. Details on using each function are described in this part of the guide.

The electronic Manuals are included in the supplied CD-ROM.

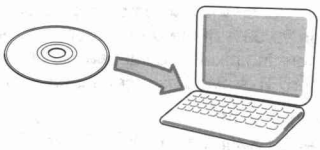

Read This First

Test Shots

Take some initial test shots and play them back to make sure the images were recorded correctly. Please note that Canon Inc., its subsidiaries and affiliates, and its distributors are not liable for any consequential damages arising from any malfunction of a camera or accessory, including memory cards, that results in the failure of an image to be recorded or to be recorded in a way that is machine readable.

Warning Against Copyright Infringement

The images recorded with this camera are intended for personal use. Do not record images that infringe upon copyright laws without the prior permission of the copyright holder. Please be advised that in certain cases the copying of images from performances, exhibitions, or commercial properties by means of a camera or other device may contravene copyright or other legal rights even if the image was shot for personal use.

Warranty Limitations

For information on your camera's warranty, please refer to the Canon Warranty System Booklet supplied with your camera.
For Canon Customer Support contacts, please see the Warranty System Booklet.

LCD Monitor

The LCD monitor is produced with extremely high-precision manufacturing techniques. More than 99.99% of the pixels operate to specification, but occasionally non-performing pixels may appear as bright or dark dots. The camera is not damaged. This also has no effect on the recorded image.

Camera Body Temperature

Please take care when operating the camera for an extended period as the camera body may become warm. The camera is not damaged.

Memory Cards

This camera can use various types of memory cards. These are collectively referred to as memory cards in this guide.

CANON INC.
30-2, Shimomaruko 3-chome, Ohta-ku, Tokyo 146-8501, Japan

CANON EUROPA N.V.
Bovenkerkerweg 59-61, 1185 XB Amstelveen, The Netherlands

Table of Contents

Checking the Package Contents ii
Let's Get Started 1
Read This First 2
Charging the Battery 4
Inserting the Battery and Memory Card 6
Setting the Date and Time 9
Setting the Display Language 11
Pressing the Shutter Button 12
Taking Pictures 13
Viewing Images 16
Erasing Images 17
Printing Images 18
Shooting Movies 20
Viewing Movies 22
Downloading Images to a Computer 23
Accessories 28
Separately Sold Accessories 30
LCD Monitor Precautions 30
Safety Precautions 31

Attaching the Strap/Holding the Camera

- Attach the included strap and place it around your wrist to avoid dropping the camera during use.
- Keep your arms tight against your body while holding the camera firmly by the sides. Be sure that your fingers do not block the flash.

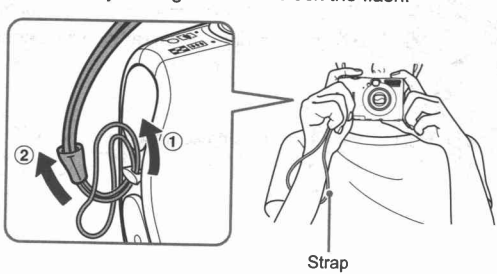

Charging the Battery

Use the included charger to charge the battery.

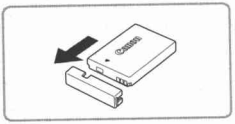

1 Remove the cover.

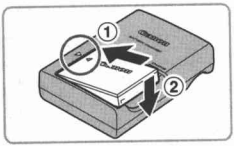

2 Insert the battery.

- Align the ▲ marks on the battery and charger, then insert the battery by sliding it in ① and down ②.

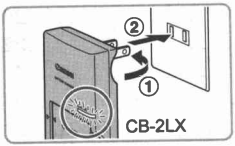

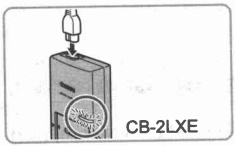

3 Charge the battery.

- Flip out the plug ① and plug it into a power outlet ② (for CB-2LX).
- Plug the power cord into the charger, then plug the other end into a power outlet (for CB-2LXE).

▶ The charge lamp lights red, and charging starts.

- The charge lamp will light green when charging has finished. Charging takes approx. 2 hours and 5 minutes.

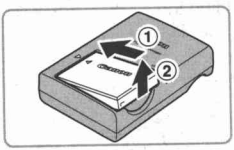

4 Remove the battery.

- Unplug the battery charger from the power outlet, then remove the battery by sliding it in ① and up ②.

To protect the battery and prolong its life, do not charge it for longer than 24 hours continuously.

Approximate Number of Shots That Can Be Taken

Number of shots	LCD monitor on.*	280
	LCD monitor off.	700
Playback Time (Hours)		6

* The number of shots that can be taken is based on the Camera & Imaging Products Association (CIPA) measurement standard.
- Depending on the shooting conditions, the number of shots that can be taken may be less.

Battery Charge Indicator

An icon or message will appear on the screen (see *Camera User Guide*) indicating the battery's charge state.

Display	Summary
	Good.
	Slightly depleted, but sufficient.
(Blinking red)	Nearly depleted.
"Change the battery pack."	Depleted. Recharge the battery.

Using the battery and charger effectively

- Charge the battery on the day, or the day before, it will be used.
  Charged batteries continue to discharge naturally even if they are not used.



Attach the cover to a charged battery so that the ▲ mark is visible.

- How to store the battery for long periods.
  Deplete and remove the battery from the camera. Attach the terminal cover and store the battery. Storing a battery without depleting it for long periods of time (about one year) may shorten its life span or affect its performance.
- The battery charger can also be used when abroad.
  The charger can be used in regions that have 100 – 240 V (50/60 Hz) AC power. If the plug does not fit the outlet, use a commercially available plug adapter. Do not use devices such as electrical transformers for foreign travel because they will cause malfunctions.
- If the battery is quickly depleted even after charging, it has reached the end of its life span.
  Purchase a new battery.

Inserting the Battery and Memory Card

Insert the included battery and memory card into the camera.

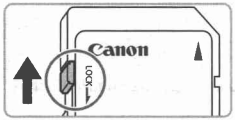

1 Check the card's write-protect tab.

- If the memory card has a write-protect tab, you will not be able to take images if the tab is in the locked position. Slide the tab up until you hear a click.

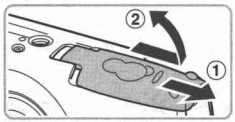

2 Open the cover.

- Slide the cover ①, and open it ②.

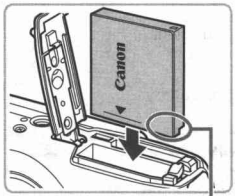

Terminals

3 Insert the battery.

- Insert the battery as shown until it locks into place with a click.
- Be sure to insert the battery in the correct direction or it will not properly lock into place.

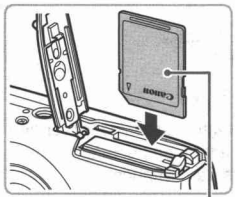

Label

4 Insert the memory card.

- Insert the memory card as shown until it locks into place with a click.
- Inserting the card in the wrong direction could damage the camera. Be sure the card is oriented correctly.

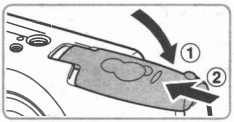

5 Close the cover.

- Close the cover ①, and slide it ② until it locks into place with a click.

Removing the Battery and Memory Card

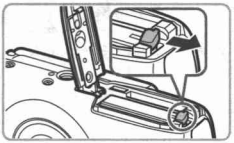

1 Remove the battery.

- Open the cover and press the battery lock in the direction of the arrow.

▶ The battery will pop up.

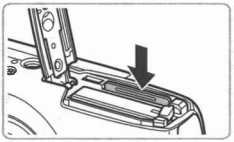

2 Remove the memory card.

- Push the memory card in until you hear a click, then slowly release it.

▶ The memory card will pop up.

Approximate Number of Shots per Memory Card

Memory Card	32 MB (Supplied)	2 GB	8 GB
Number of shots	7	516	2063

- Values are based on a camera at default settings.
- The number of shots that can be taken will vary depending on camera settings, the subject and the memory card used.

Can you check the number of shots that can be taken?

You can check the number of shots that can be taken when the camera is in a Shooting Mode (p. 13).

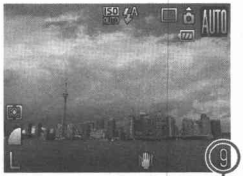

Number of shots that can be taken

Compatible Memory Cards

- SD memory cards
- SDHC memory cards
- MultiMediaCards
- MMCplus memory cards
- HC MMCplus memory cards

What is the write-protect tab?

SD and SDHC memory cards have a write-protect tab. If this tab is in the locked position, [Card Locked!] will appear on the screen and you will not be able to take or erase images.

Setting the Date and Time

The Date/Time settings menu will appear the first time the camera is turned on. Since the date and time recorded into your images are based on these settings, be sure to make them.

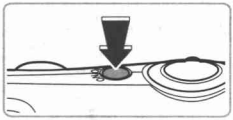

1 Turn on the camera.

- Press the power button.
- The Date/Time settings menu will appear.

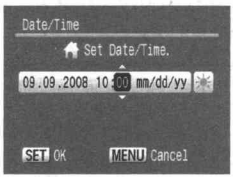

2 Set the date and time.

- Press the ◀▶ buttons to select an option.
- Press the ▲▼ buttons or turn the ⊙ dial to set a value.

3 Make the setting.

- Press the (FUNC SET) button.
- Once the date and time have been set, the Date/Time settings menu will close.
- Pressing the power button will turn off the camera.

Reappearing Date/Time settings menu

Set the correct date and time. If you have not set the date and time, the Date/Time settings menu will appear each time you turn on the camera.

Daylight saving time settings

In Step 2, if you select ☀ and press the ▲▼ buttons, or turn the ⊙ dial, and set ☀, daylight saving time (plus 1 hour) will be set.

Changing the Date and Time

You can change the current date and time settings.

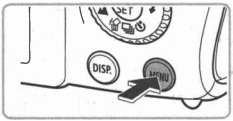

1 Display the menus.

- Press the MENU button.

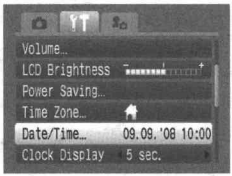

2 Select [Date/Time] in the tab.

- Press the ◀▶ buttons to select the tab.
- Press the ▲▼ buttons or turn the dial to select [Date/Time], then press the (FUNC SET) button.

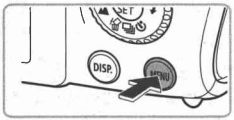

3 Change the date and time.

- Follow Steps 2 and 3 on p. 9 to make the setting.
- Pressing the MENU button will close the menu.

Date/Time battery

- The camera has a built-in date/time battery (backup battery) that allows the date/time settings to be retained about three weeks after the battery pack has been removed.
- By inserting a charged battery or connecting an AC adapter kit (sold separately) (p. 30), the date/time battery can be charged in about 4 hours even if the camera is not turned on.
- If the date/time battery is depleted, the Date/Time menu will appear when you turn the camera on. Follow the steps on p. 9 to set the date and time.

Setting the Display Language

You can change the language displayed in the LCD monitor menus and messages.

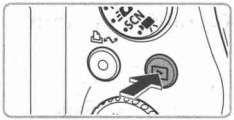

1 Display the language setting menu.

- Press the ▶ button.
- Press and hold the (FUNC SET) button ①, then immediately press the MENU button ②.

2 Set the display language.

- Press the ▲▼◀▶ buttons or turn the ◎ dial to select a language, then press the (FUNC SET) button.
- The displayed language will change.

What if the clock appears when the (FUNC SET) button is pressed?

The clock (see *Camera User Guide*) will display if the time from when you press the (FUNC SET) button to when you press the MENU button in Step 1 is too long. If the clock appears, press the (FUNC SET) button to remove the clock and perform Step 1 again.

You can also change the display language by pressing the MENU button, selecting the 🔧 tab, then selecting the [Language] menu item.

Pressing the Shutter Button

The shutter button has two stops. To take images that are in focus, be sure to first press the shutter button lightly (halfway) to focus, then take the shot.

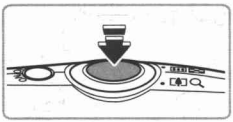

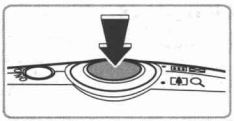

1 Press halfway (lightly to the first stop).

▶ The camera focuses and automatically makes necessary settings for shooting, such as adjusting brightness and color.

▶ When the camera focuses, it will beep twice and the indicator will light green.

2 Press fully (to the second stop).

▶ The camera plays the shutter sound and takes the shot.

● Since the shot is being taken while the shutter sound plays, be careful not to move the camera.

Does the length of the shutter sound change?

- Since the time required to shoot differs depending on the scene you want to shoot, the length of the shutter sound may change.
- If the camera or subject move while the shutter sound is playing, the recorded image may be blurry.

If you just press the shutter button fully without pausing halfway, the images you take may not be in focus.

Taking Pictures

The camera can automatically make all settings so that you can take images just by pressing the shutter button.
Also, when taking pictures of people, the face will be automatically detected and focused (see *Camera User Guide*), and the color and the brightness will adjust to the optimum levels.

1 Set the AUTO mode.

- Set the mode dial to AUTO.

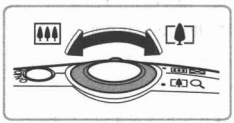

2 Compose the shot of your subject.

- Moving the zoom lever towards [T] will zoom in on your subject making it appear larger. Moving the lever towards [W] will zoom out from your subject making it appear smaller.

▶ When faces are detected, a white frame appears on the face the camera judges to be the main subject, while gray frames appear on other detected faces.

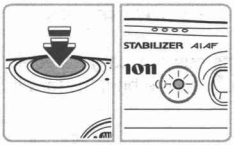

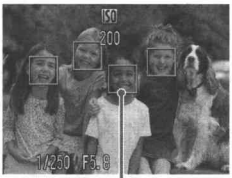

AF Frames

3 Focus.

- Press the shutter button halfway to focus.
- ▶ When the camera focuses, it will beep twice and the indicator will light green (orange when the flash will fire).
- ▶ A green frame will appear where the camera focused.
- ▶ Several AF frames will appear when the camera focuses on more than one point.

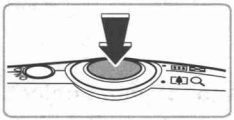

4 Shoot.

- Press the shutter button fully. The camera will play the shutter sound and shoot.
- ▶ The flash will automatically fire in low light conditions.
- ▶ The indicator will blink green while the image is recorded to the memory card.
- ▶ The image will appear on the screen for about two seconds.
- Even when an image is displayed, you can take a second picture by pressing the shutter button.

What if...

- **Nothing displays when the camera is turned on?**
  Press the DISP. button to turn on the LCD monitor.
- **The camera does not play any sounds?**
  Pressing the DISP. button while turning on the camera power will turn off all sounds except for warning sounds. To turn on sound, press the MENU button, select the tab, and then select the [Mute]. Use the ◀▶ buttons to select [Off].
- **The image comes out dark even if the flash fired when shooting?**
  Subject is too far away for the flash to reach. Shoot within the effective flash range of approximately 50 cm – 4.6 m (1.6 – 15 ft.) at maximum wide angle, and approximately 50 cm – 2.4 m (1.6 – 7.9 ft.) at maximum telephoto.
- **The indicator blinks yellow, and the camera beeps once when the shutter button is pressed halfway?**
  The subject is too close. Back up approximately 50 cm, press the shutter button halfway, and shoot when the indicator is not blinking yellow.
- **The lamp lights when the shutter button is pressed halfway.**
  To reduce red-eye and to assist in focusing, the lamp may light when shooting in dark areas (see *Camera User Guide*).
- **ϟ appears on the screen and the shot cannot be taken even though the shutter button was pressed fully.**
  The flash is charging. Keep the shutter button pressed fully, after a while the indicator will light orange and the camera will take the shot.

Viewing Images

You can view the images you have taken on the screen.

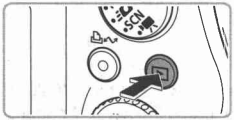

1 Set the playback mode.

- Press the ▶ button.
- The last image you took will appear.

2 Select an image.

- Pressing the ◀ button will cycle through the images in the reverse order they were taken.
- Pressing the ▶ button will cycle through the images in the order they were taken.
- The images change more quickly if you keep the ◀▶ buttons pressed, but they will appear coarse.
- The screen on the left will appear when you turn the ⊙ dial. Turning it counter-clockwise displays images in the reverse order they were taken, while turning it clockwise displays images in the order they were taken.
- The central image will be displayed full-size when you stop turning the ⊙ dial.
- Pressing the ▶ button while the lens is extended will return you to the shooting screen.
- When approximately 1 minute elapses, the lens will retract. If you press the ▶ button with the lens retracted, the power will turn off.

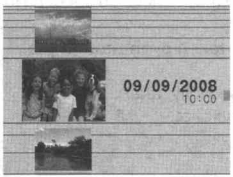

Switching to and from playback mode

Pressing the ▶ button while the camera is off, turns the camera on in playback mode. Pressing it again turns the camera off. Pressing the shutter button halfway while in playback mode will bring you to the shooting screen.

Erasing Images

You can select and erase images one at a time. Please note that erased images cannot be recovered. Exercise adequate caution before erasing an image.

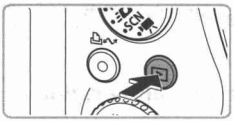

1 Set the playback mode.

- Press the ▶ button.

2 Select an image to erase.

- Press the ◀▶ buttons or turn the ◎ dial to display an image to erase.

3 Erase the image.

- Press the ▼ button.
- [Erase] appears.
- Press the ◀▶ buttons or turn the ◎ dial to select [Erase], then press the (FUNC SET) button.
- The displayed image will be erased.
- To exit instead of erasing, press the ◀▶ buttons or turn the ◎ dial to select [Cancel], then press the (FUNC SET) button.

Printing Images

You can easily print the images you have taken if you connect the camera to a PictBridge compliant printer (sold separately).

Items to Prepare

- Camera and PictBridge compliant printer (sold separately)
- Interface cable supplied with the camera (p. ii)

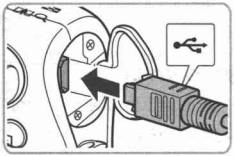

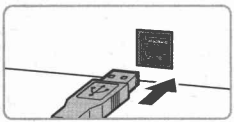

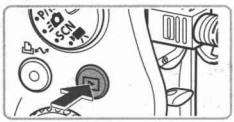

1 Turn off the camera and printer.

2 Connect the camera to the printer.

- Open the cover, and insert the small end of the plug firmly into the camera terminal in the direction shown.
- Insert the cable's larger plug into the printer. For connection details, refer to the user guide provided with the printer.

3 Turn on the printer.

4 Press the ▶ button and turn on the camera.

▶ SET will appear on the screen, and the button will light blue.

5 Select an image to print.

- Press the ◀▶ buttons or turn the ⊙ dial to select an image.

6 Print images.

- Press the 🖨 button.
- ▶ Printing will start and the 🖨 button will blink blue.
- If you want to print additional images, repeat Steps 5 and 6 after printing has completed.
- After printing has completed, turn off the camera and printer, and unplug the interface cable.

Refer to the *Direct Print User Guide* for details on printing, including printing with direct print compatible printers.

Canon-Brand PictBridge Compliant Printers (Sold Separately)

By connecting your camera to one of the Canon-brand PictBridge compliant printers below, you can print your images without having to use a computer.

Compact Photo Printers
(SELPHY Series)

Inkjet Printers

For more information, visit your nearest Canon retailer.

Shooting Movies

The camera can automatically make all settings so that you can shoot movies just by pressing the shutter button.

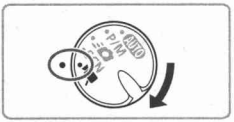

1 Set the mode.

- Set the mode dial to .

Shooting Time

2 Set the mode.

- Turn the dial to set the mode to .

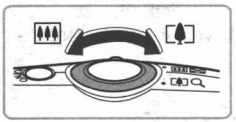

3 Compose the shot of your subject.

- Moving the zoom lever towards will zoom in on your subject making it appear larger. Moving the lever towards will zoom out from your subject making it appear smaller.

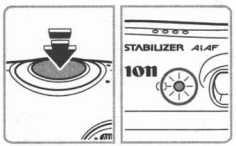

4 Focus.

- Press the shutter button halfway to focus.
- When the camera focuses, it will beep twice and the indicator will light green.

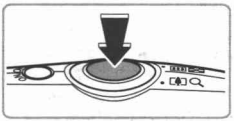

5 Shoot.

- Press the shutter button fully.
- The camera will start shooting the movie, and [● Rec.] and the elapsed time will appear on the screen.
- Once shooting begins, take your finger off the shutter button.
- If you change the composition of your shot during shooting, the focus will stay the same, but the brightness, and tone will automatically adjust.

Elapsed Time

- Do not touch the microphone while shooting.
- Do not press any buttons other than the shutter button. The sound that buttons make will be recorded in the movie.

Microphone

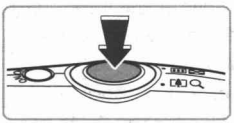

6 Stop shooting.

- Press the shutter button fully again. The camera will beep once and stop shooting the movie.
- The indicator will blink green, and the movie will record to the memory card.
- Shooting will automatically stop when the memory card fills.

Estimated Shooting Times

	32 MB (Supplied)	2 GB	8 GB
	22 sec.	23 min. 49 sec.	1 hr. 35 min. 11 sec.

- Shooting times are based on a camera at default settings.
- Shooting time can be checked on the screen in Step 2.
- Max. clip length is approx. 1 hour.
  Recording also stops when the file size reaches 4 GB.

Viewing Movies

You can view the movies you have shot on the screen.

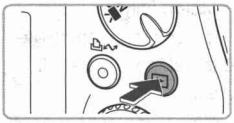

1 Set the playback mode.

- Press the ▶ button.
- ▶ The last movie you shot will appear.
- ▶ SET appears on movies.

2 Select a movie.

- Press the ◀▶ buttons or turn the dial to select a movie, then press the FUNC. SET button.
- ▶ The movie control panel will appear on the screen.

3 Play the movie.

- Press the ◀▶ buttons or turn the dial to select ▶, then press the FUNC. SET button.
- ▶ The movie will play.
- You can pause/resume the movie by pressing the FUNC. SET button again.
- Press the ▲▼ buttons to adjust the volume.

When watching a movie on a computer, frames may drop, it may not play smoothly, and the audio may stop suddenly depending on the computer's capabilities.

For more information on the movie control panel, refer to the *Camera User Guide*.

Downloading Images to a Computer

You can use the included software to download the images you have taken to a computer.

Items to Prepare

- Camera and computer
- Canon Digital Camera Solution Disk supplied with the camera (p. ii)
- Interface cable supplied with the camera (p. ii)

System Requirements

Windows

OS	Windows Vista (including Service Pack 1) Windows XP Service Pack 2	
Computer model	The above OS should be pre-installed on computers with built-in USB ports.	
CPU	Viewing images	Windows Vista: Pentium 1.3 GHz or higher Windows XP: Pentium 500 MHz or higher
	Viewing movies	Core2 Duo 1.66 GHz or higher
RAM	Viewing images	Windows Vista: 512 MB or more Windows XP: 256 MB or more
	Viewing movies	1 GB or more
Interface	USB	
Free Hard Disk Space	Canon Utilities	ZoomBrowser EX: 200 MB or more PhotoStitch: 40 MB or more
Display	1,024 x 768 pixels/High Color (16 bit) or better	

Macintosh

OS	Mac OS X (v10.4 – v10.5)	
Computer model	The above OS should be pre-installed on computers with built-in USB ports.	
CPU	Viewing images	PowerPC G4/G5 or Intel Processor
	Viewing movies	Core Duo 1.66 GHz or higher
RAM	Viewing images	Mac OS X (v10.5): 512 MB or more Mac OS X (v10.4): 256 MB or more
	Viewing movies	1 GB or more
Interface	USB	
Free Hard Disk Space	Canon Utilities	ImageBrowser: 300 MB or more PhotoStitch: 50 MB or more
Display	1,024 x 768 pixels/32,000 Colors or better	

Preparations

Windows XP and Mac OS X (v10.4) are used for these explanations.

1 Install the software.

Windows

① Place the Canon Digital Camera Solution Disk in the computer's CD-ROM drive.

② Click [Easy Installation].

- Follow the onscreen instructions to proceed with the installation.

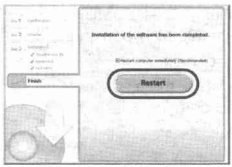

③ When the install finishes, click [Restart] or [Finish].

④ Remove the CD-ROM.

- Remove the CD-ROM when your normal desktop screen appears.

Macintosh

- Place the Canon Digital Camera Solution Disk in the computer's CD-ROM drive.
- The installer panel appears when you double-click the icon in the CD-ROM window.
- Click [Install], and follow the onscreen instructions to proceed with the installation.

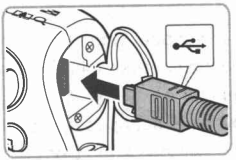

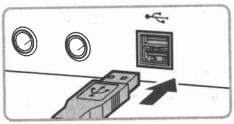

2 Connect the camera to the computer.

- Make sure the camera is turned off before connecting.
- Open the cover, and insert the small end of the plug firmly into the camera terminal in the direction as shown.
- Insert the cable's larger plug into the computer's USB port. For connection details, refer to the user guide provided with the computer.

3 Establish a connection between the camera and computer.

- Press the [▶] button and turn on the camera.

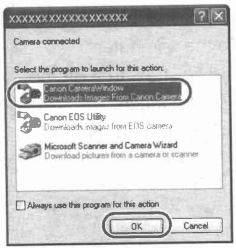
Camera connected
Select the program to launch for this action:
Canon CameraWindow
Download Images From Canon Camera
Canon EOS Utility
Downloads images from EOS camera
Microsoft Scanner and Camera Wizard
Download pictures from a camera or scanner
Always use this program for this action
OK
Cancel

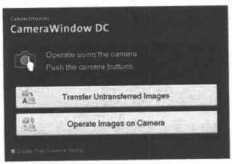

4 Open CameraWindow.

Windows

- Select [Canon CameraWindow] and click [OK].
- CameraWindow will appear.
- If CameraWindow does not appear, click the [Start] menu and select [All Programs] or [Programs], followed by [Canon Utilities] ▶ [CameraWindow] ▶ [CameraWindow] ▶ [CameraWindow].
- The Direct Transfer menu appears on the camera's screen, and the button will light blue.

Macintosh

- ▶ CameraWindow will appear when you establish a connection between the camera and computer.
- If CameraWindow does not appear, click the [CameraWindow] icon on the Dock (the bar which appears at the bottom of the desktop).
- ▶ The Direct Transfer menu appears on the camera's screen, and the button will light blue.

You cannot shoot while the Direct Transfer menu displays.

Downloading Images with a Computer

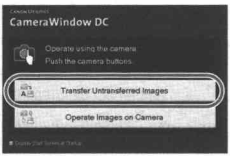

- Click [Transfer Untransferred Images].
- ▶ All images not previously downloaded will be downloaded to the computer.
- After the download finishes, turn off the camera and unplug the cable.
- For further operations, refer to the *Software Starter Guide*.

Downloading Images with the Camera

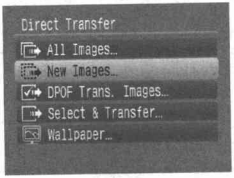

1 Select [New Images].

- Press the ▲▼ buttons or turn the ◎ dial to select [New Images].
- If the screen on the left is not showing, press the MENU button.

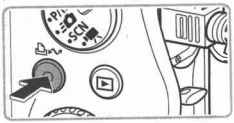

2 Download images.

- Press the button.
- All images that have not already been transferred to the computer are transferred.
- After transferring finishes, turn off the camera and unplug the cable.
- For further operations, refer to the *Software Starter Guide*.

Downloaded images will be sorted by date and saved in separate folders in the "My Pictures" folder for Windows or the "Picture" folder for Macintosh.

Accessories

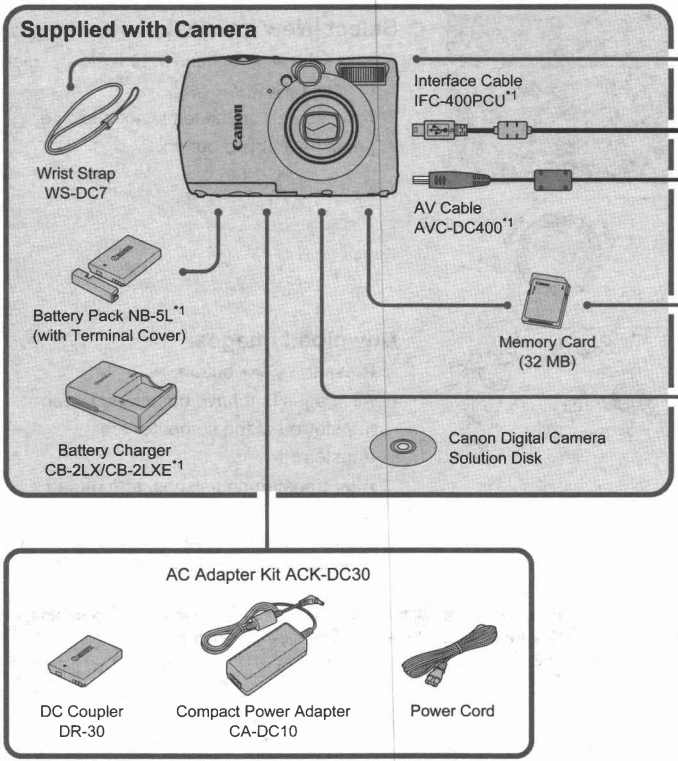

*1 Also available for purchase separately.
*2 See the user guide supplied with the printer for more information on the printer and interface cables.

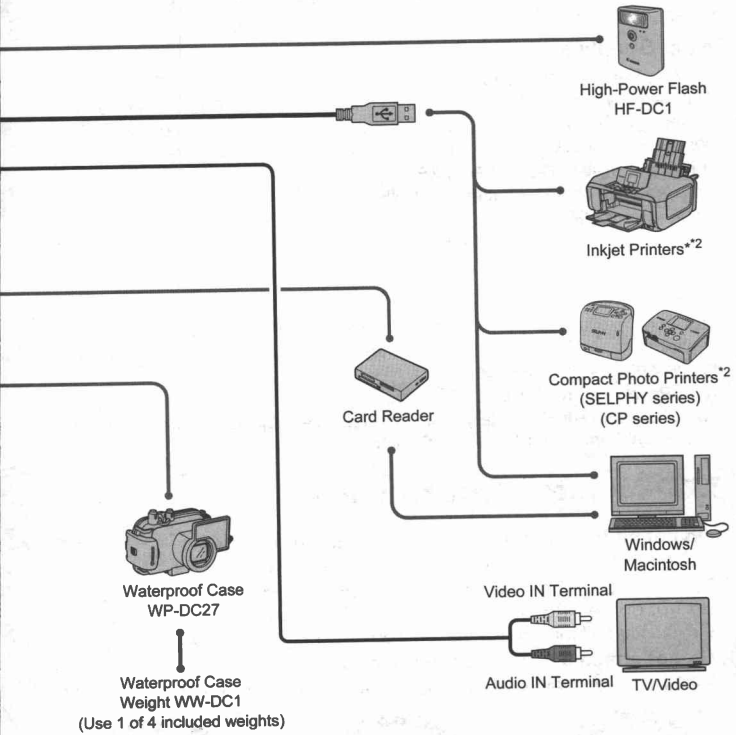

Use of genuine Canon accessories is recommended.

This product is designed to achieve excellent performance when used with genuine Canon accessories. Canon shall not be liable for any damage to this product and/or accidents such as fire, etc., caused by the malfunction of non-genuine Canon accessories (e.g., a leakage and/or explosion of a battery pack). Please note that this warranty does not apply to repairs arising out of the malfunction of non-genuine Canon accessories, although you may request such repairs on a chargeable basis.

Separately Sold Accessories

The following camera accessories are sold separately.
Some accessories are not sold in some regions, or may no longer be available.

Power Supplies

- **AC Adapter Kit ACK-DC30**
  This kit lets you power the camera using household power. Recommended for powering the camera for an extended period of time or when connecting to a computer. Cannot be used to charge the battery inside the camera.
- **Battery Charger CB-2LX/CB-2LXE**
  An adapter for charging Battery Pack NB-5L.
- **Battery Pack NB-5L**
  Rechargeable lithium-ion battery.

Other Accessories

- **Waterproof Case WP-DC27**
  Installing the camera into this waterproof case lets you take underwater shots at depths down to 40 meters (130 feet), or take worry-free pictures in the rain, at the beach, or on the ski slopes.
- **High-Power Flash HF-DC1**
  This attachable supplementary flash can illuminate subjects that are too distant for the light from the built-in flash to reach.

LCD Monitor Precautions

- **Do not sit in a chair with the camera in your pocket.**
  Doing so may cause malfunction or damage the LCD monitor.
- **When putting the camera in your bag, ensure that hard objects do not come into contact with the LCD monitor.**
  If this occurs, it may cause malfunction or damage the LCD monitor.
- **Do not attach accessories to the strap.**
  Doing so may cause malfunction or damage the LCD monitor.

Safety Precautions

- Before using the camera, please ensure that you read the safety precautions described below and in the "Safety Precautions" section. Always ensure that the camera is operated correctly.
- The safety precautions noted on the following pages are intended to prevent injuries to yourself and other persons, or damage to the equipment.
- Be sure to also check the guides included with any separately sold accessories you use.

⚠ **Warnings** Denotes the possibility of serious injury or death.

⚠ **Cautions** Denotes the possibility of injury or damage to the equipment.

⚠ Warnings

Camera

- **Store this equipment out of the reach of children and infants.**
  Strap: Putting the strap around a child's neck could result in asphyxiation.
  Memory card, day/date battery: Dangerous if accidentally swallowed. If this occurs, contact a doctor immediately.
- **Do not trigger the flash in close proximity to human eyes.**
  Exposure to the intense light produced by the flash may damage eyesight. In particular, remain at least one meter (39 inches) away from infants when using the flash.
- **Do not attempt to disassemble or alter any part of the equipment that is not expressly described in this guide.**
- **To avoid the risk of injury, do not touch the interior of the camera if it has been dropped or otherwise damaged.**
- **Stop operating the camera immediately if it emits smoke, a strange smell, or otherwise behaves abnormally.**
- **Do not allow liquids or foreign objects to enter the camera.**
  This could result in fire or electrical shock.
  If liquid or foreign objects come into contact with the camera interior, immediately turn the camera power off and remove the battery.
- **Do not use organic solvents such as alcohol, benzine, or thinner to clean the equipment.**
- **Use only recommended power sources.**

Battery, Battery Charger

- **Use only recommended batteries.**
- **Do not place the battery near or in direct flame.**
- **Do not let the battery come into contact with water (e.g. sea water) or other liquids.**
- **Do not attempt to disassemble, alter or apply heat to the battery.**

- **Avoid dropping or subjecting the battery to severe impacts.**
  This may cause explosions or leaks, resulting in fire, injury and damage to the surroundings. In the event that a battery leaks and the eyes, mouth, skin or clothing contacts these substances, immediately flush with water and seek medical assistance. If the battery charger becomes wet, unplug it from the outlet and consult your camera distributor or the closest Canon Customer Support Help Desk.
- **Unplug the battery charger from the power outlet after recharging is complete, or when you are not using it.**
- **Do not place anything, such as cloth on top of the battery charger while it is charging.**
  Leaving the unit plugged in for a long period of time may cause it to overheat and distort, resulting in fire.
- **Use only the specified battery charger to charge the battery.**
- **Do not cut, damage, alter or place heavy items on the power cord.**
- **Unplug the power cord periodically and wipe away any dust and dirt that has collected on the plug, the exterior of the power outlet, and the surrounding area.**
- **Do not handle the power cord with wet hands.**
  This could result in fire or electrical shock.
- **Before you discard batteries, cover the terminals with tape or other insulators.**
  Contacting other metal materials in waste containers may lead to fire or explosions.

European Union (and EEA) only.
This symbol indicates that this product is not to be disposed of with your household waste, according to the WEEE Directive (2002/96/EC) and your national law. This product should be handed over to a designated collection point, e.g., on an authorized one-for-one basis when you buy a new similar product or to an authorized collection site for recycling waste electrical and electronic equipment (EEE). Improper handling of this type of waste could have a possible negative impact on the environment and human health due to potentially hazardous substances that are generally associated with EEE. At the same time, your cooperation in the correct disposal of this product will contribute to the effective usage of natural resources. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, waste authority, approved WEEE scheme or your household waste disposal service.
For more information regarding return and recycling of WEEE products, please visit www.canon-europe.com/environment.
(EEA: Norway, Iceland and Liechtenstein)

⚠ Cautions

- **Do not aim the camera at bright light sources (the sun, etc.).**
  Doing so may cause malfunction or damage the image sensor (CCD).
- **Be careful not to bang the camera or subject it to strong impacts or shocks when hanging it by the strap.**
- **Be careful not to bump or push strongly on the lens.**
  This could lead to injury or damage the camera.
- **When using the camera on a beach or at a windy location, be careful not to allow dust or sand to enter the camera.**
  This may cause the camera to malfunction.
- **Do not use the equipment in a manner that exceeds the rated capacity of the electrical outlet or wiring accessories. Do not use if the power cord or plug are damaged, or if not fully plugged into the outlet.**
- **Avoid using, placing or storing the camera in the following places.**
  - Places subject to strong sunlight.
  - Places subject to temperatures above 40° C (104° F).
  - Humid or dusty areas.

  These could cause leakage, overheating or explosion, resulting in fire, burns or other injuries. High temperatures may also cause deformation of the casing.
- **Do not allow dirt or metal objects (such as pins or keys) to contact the charger terminals or plug.**
  This could result in fire, electrical shock or other damage.
- **Do not use the flash with dirt, dust or other items stuck to the surface, or when covering the flash with your fingers or clothing.**
  This may cause the camera to malfunction.

PRINTED IN THE EU
© CANON INC. 2008

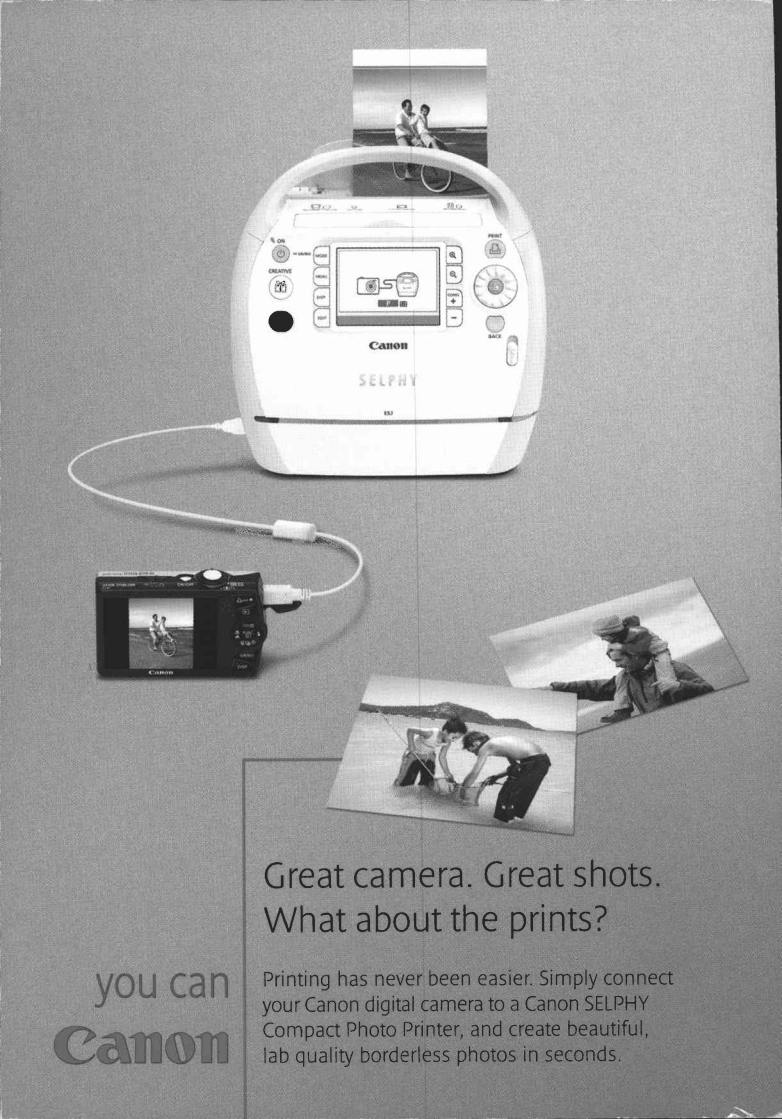

Great camera. Great shots. What about the prints?

you can Canon

Printing has never been easier. Simply connect your Canon digital camera to a Canon SELPHY Compact Photo Printer, and create beautiful, lab quality borderless photos in seconds.